


Leica 3D Disto All about height

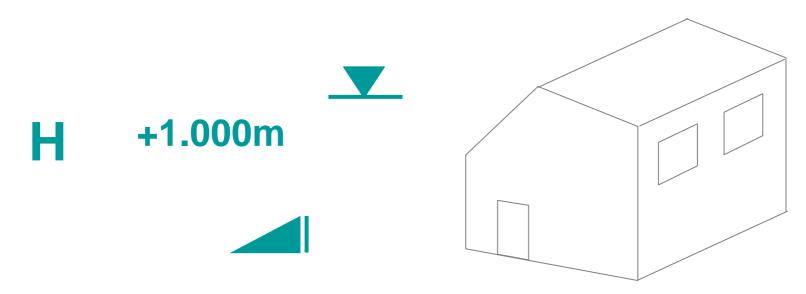


Questions

- How can I measure the height difference between two points?
- What is a "height reference"?
- What is the "height" of a measured point?
- How does "Measure" and "Room Scan" application handle heights?






How can I measure the height difference between two points?

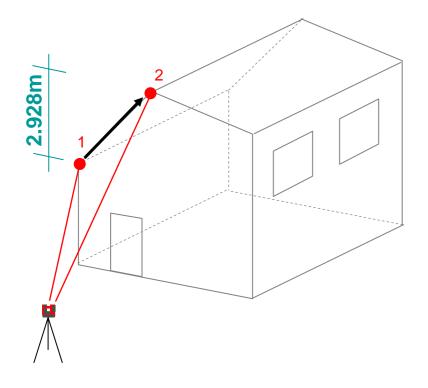

- Application "Measure"
- target and measure both points
- result is

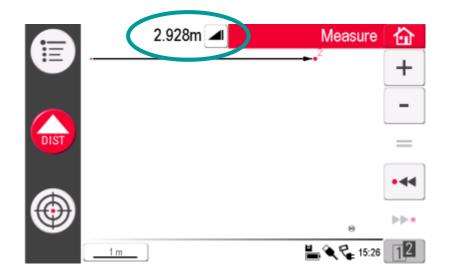




What is a "Height Reference"?




The height reference is a point that all other heights refer to, e.g. the basement floor is defined as 0.000

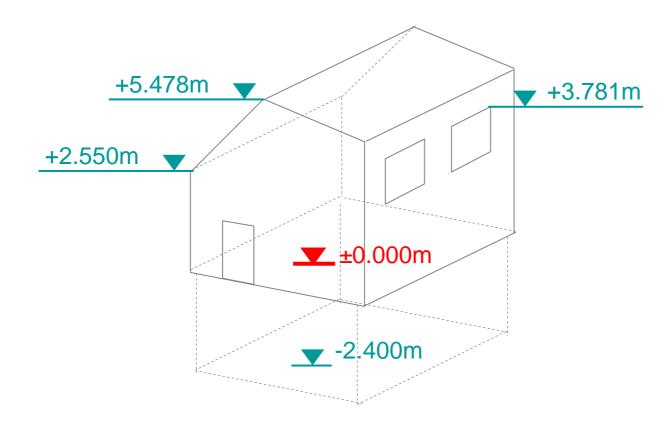



What is the "height" of a measured point?

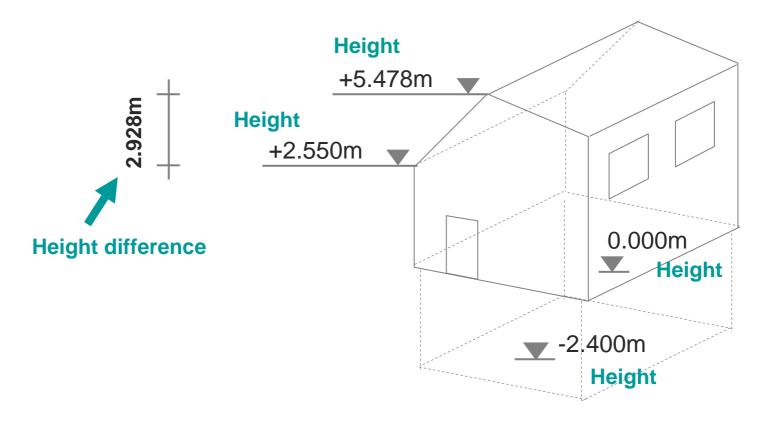




How does "Measure" and "Room Scan" application handle heights?

1.

Use the "Measure" application for simple single measurements. It determines height differences, but no heights

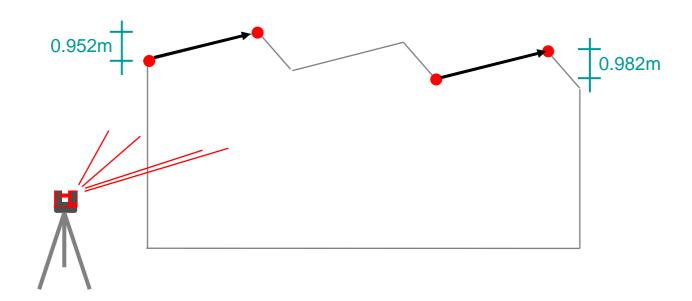





How does "Measure" and "Room Scan" application handle heights?



The "Room Scan" application determines height differences <u>and</u> heights:

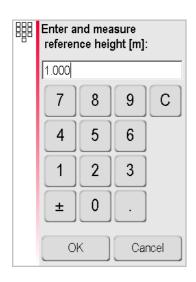

First you enter and measure a height reference, e.g. an existing meter mark with +1.000m

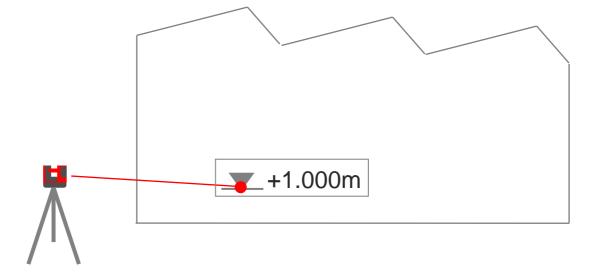




How does "Measure" and "Room Scan" application handle heights?



"Room Scan" application:

Then make your measurements. Height differences and heights are determined.

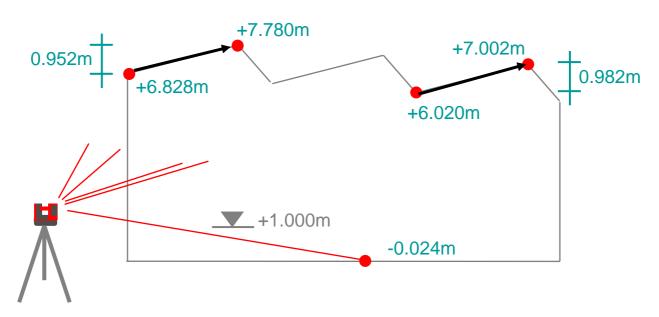




myworld

Further tutorials for download

If you register at myWorld@Leica Geosystems you will have access to a wide range of services, information and training material:

- warranty extension
- tutorials
- software updates
- support
- manuals
- ...
- ...

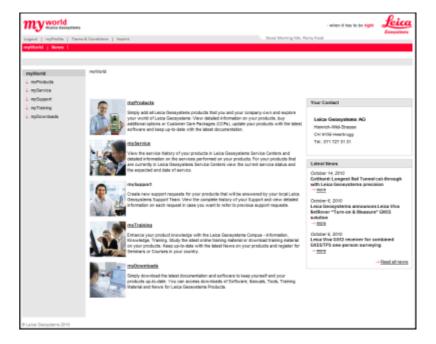

https://myworld.leica-geosystems.com www.3ddisto.com

